
NOMENCLATURE EORL: END OF ROW LEFT


EORR: END OF ROW RIGHT

INT: INTERMEDIATE

IND: INDIVIDUAL

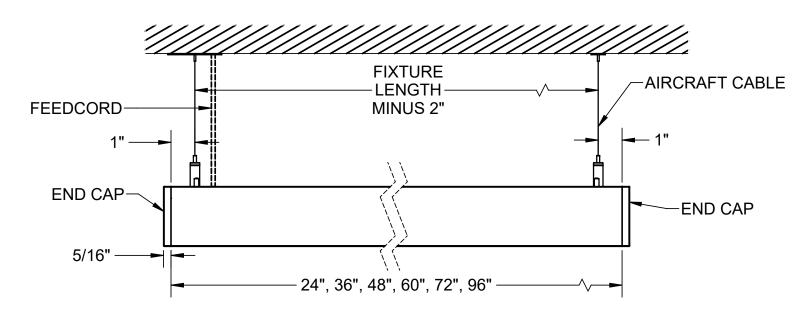


SIDE VIEW - INDIVIDUALLY MOUNTED

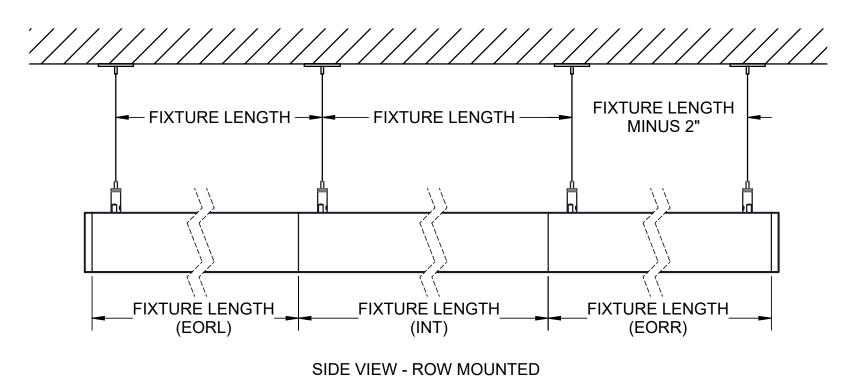

2 1/2"

CROSS SECTION VIEW

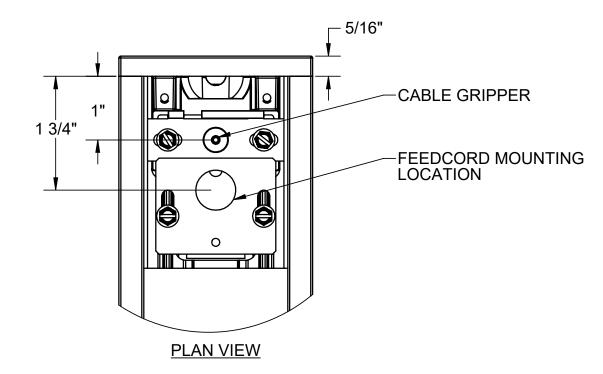

GENERAL NOTES: (READ SHEETS COMPLETELY BEFORE STARTING)

- 1. APPROXIMATE WEIGHT OF FIXTURE IS 2 LBS PER FOOT OF LENGTH.
- 2. FOR ROW JOINING, EVERY FIXTURE HAS A CABLE GRIPPER ON THE LEFT SIDE. EORR FIXTURES HAVE GRIPPERS ON BOTH SIDES.
- 3. EACH FIXTURE HAS ITS OWN FEEDCORD AND REMOTE ENCLOSURE. REFER TO SUPPLEMENTAL REMOTE ENCLOSURE INSTALLATION GUIDE, 93158666 AND 93158667. BE SURE TO READ THROUGH THE INSTRUCTIONS COMPLETLEY BEFORE INSTALLING.

TOOLS REQUIRED	SUPPLIED BY INSTALLER
- 1/4" HEX DRIVER/DRILL - 1/8" HEX KEY - WIRE SNIPS	




INSTALLATION INSTRUCTIONS

FIXTURE SERIES: 70L PENDANT


MOUNTING TYPE: AIRCRAFT CABLE

PAGE: 2 OF 3

1

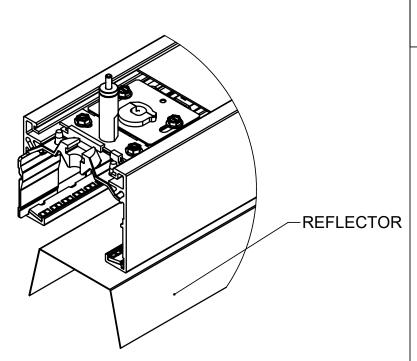


REMOVE REFLECTOR FROM ALL FIXTURES. <u>KEEP REFLECTOR</u>
<u>INSIDE PROTECTIVE SLEEVE UNTIL READY TO REINSTALL</u>
<u>REFLECTOR</u>.

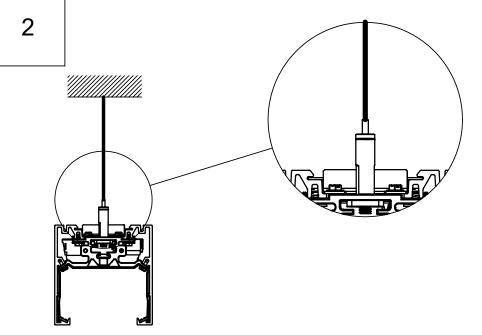


TO ATTACH AIRCRAFT CABLE, PUSH IN TOP OF GRIPPER AND INSERT CABLE. IF ROW JOINING, START WITH EORR FIXTURE.

NOTE: ENDCAP IS REMOVED FOR FULL VIEW OF GRIPPER.

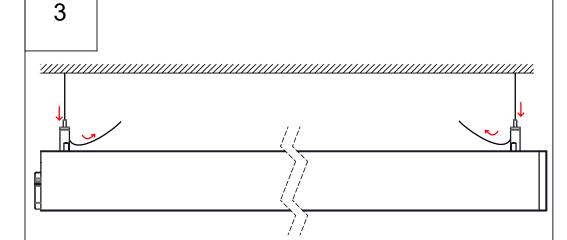

PULL EACH CABLE, ONE AT A TIME, WHILE SIMULTANEOUSLY HOLDING UP THE FIXTURE UNTIL LEVEL AT DESIRED HEIGHT. TO LET OUT CABLE PUSH IN TOP OF GRIPPER. LOOSEN SCREWS ON PLATE FOR SIDE TO SIDE ADJUSTMENT AS NEEDED AND RETIGHTEN. SNIP EXCESS WIRE.


IND FIXTURES HAVE BOTH ENDCAPS PREINSTALLED, INT FIXTURES HAVE NO ENDCAPS. EORL AND EORR HAVE ONE. SKIP TO STEP 5 IF HANGING AN IND FIXTURE.

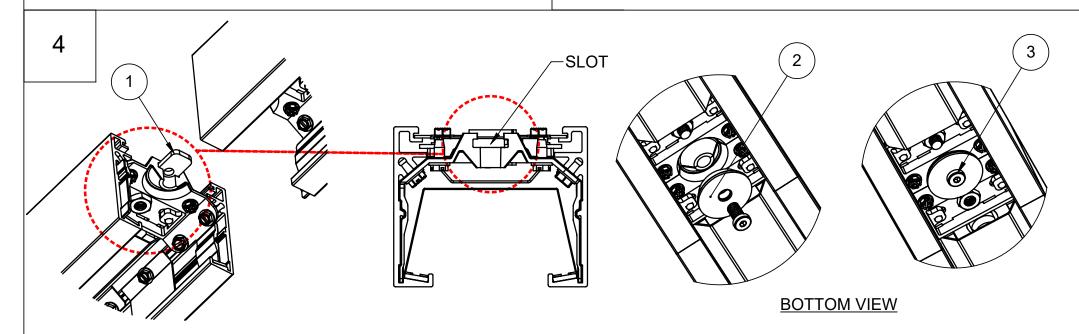

-ONCE EORR FIXTURE IS HUNG, HANG SECOND FIXTURE ON ONE SIDE WITH STEPS 1-3. REFER TO CABLE GRIPPER LAYOUT ON SHEET 1.

-ONCE HUNG, ROW JOIN BY INSERTING FLAT STRAP PIECE (1) INTO SLOT IN END HEADER. CONNECT SECOND FIXTURE TO THE FIRST FIXTURE. FROM BELOW, INSERT WASHER (2) INTO GROOVE AND SECURE WITH SOCKET CAP SCREW (3) WITH 1/8" HEX KEY.

-REPEAT UNTIL ALL FIXTURES IN THE ROW ARE HUNG.

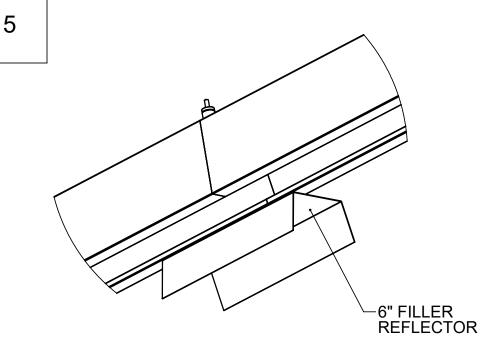

REMOVE REFLECTORS FROM PROTECTIVE SLEEVE AND IMMEDIATLEY REINSTALL IN EACH FIXTURE. AT EACH ROW JOINING LOCATION, INSTALL 6" FILLER REFLECTOR, IF APPLICABLE.

LITECONTROL litecontrol.com

DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100

DRAWING: 93158030


REV / DATE: 6 / 3/4/2022

ADDITIONAL INSTALLATION INFORMATION


FIXTURE SERIES: 70L PENDANT

MOUNTING TYPE: AIRCRAFT CABLE


CABLE GRIPPER INSTALL

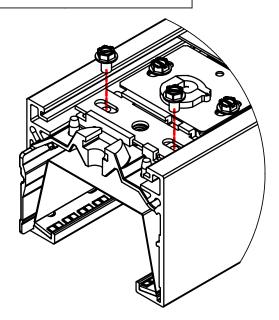

REMOVE TWO SCREWS FROM GRIPPER PLATE WITH 1/4" SOCKET HEAD

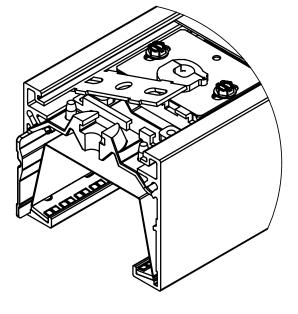



SLIDE PLATE TO THE LEFT UNTIL GROOVES ON PLATE ARE IN OPEN CHANNELS ON THE END HEADER. REMOVE PLATE AT AN ANGLE.

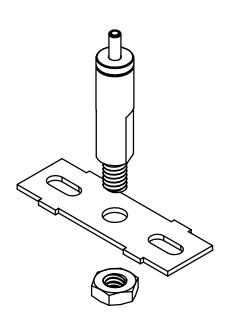

INSERT GRIPPER INTO PLATE AND SECURE WITH PROVIDED NUT. TO REINSTALL FOLLOW FIRST TWO STEPS IN REVERSE ORDER.

END CAP INSTALL

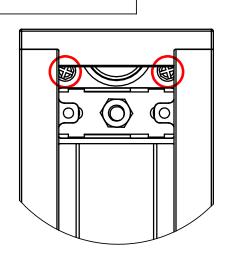

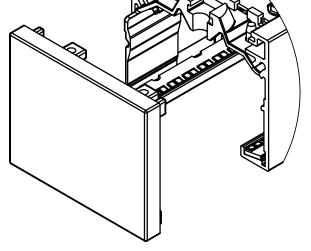

PAGE: 3 OF 3

WITH THE REFLECTOR REMOVED, REMOVE THE TWO 1/4" HEX SCREWS FROM INSIDE THE FIXTURE.


PULL END CAP AWAY FROM FIXTURE TO REMOVE.
TO REPLACE ENDCAP FOLLOW IN REVERE ORDER AND HOLD THE ENDCAP
TIGHT TO FIXTURE WHILE SCREWING IN.


FEEDCORD INSTALL

REMOVE WIRE COVER TO ACCESS INTERNAL WIRING. CLAMP STRAIN RELIEF BUSHING ONTO FEEDCORD AND INSERT BUSHING INTO 5/8" HOLE IN WIRE COVER (AFTER REMOVING KNOCKOUT). MAKE CONNECTIONS TO FIXTURE BY REFERING TO WIRING DIAGRAM SHOWN. REINSTALL WIRE COVER.

NOTE: WIRING DIAGRAM SHOWN IS FOR STANDARD UPLIGHT/DOWNLIGHT OPTION. SOLID WIRES FOR DOWNLIGHT, STRIPED FOR UPLIGHT.

FOR SPECTRASYNC, ADDITONAL FEED CORD WOULD BE INSTALLED ON OTHER END. FOLLOW WIRING DIAGRAM FOR CH2 WIRING. ONE FEEDCORD FOR DOWNLIGHT AND THE OTHER FOR UPLIGHT. SOLID AND STRIPED BECOME CH1 AND CH2 RESPECTIVELY.

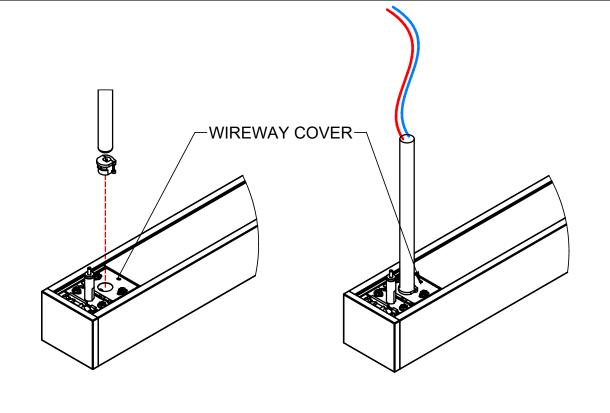

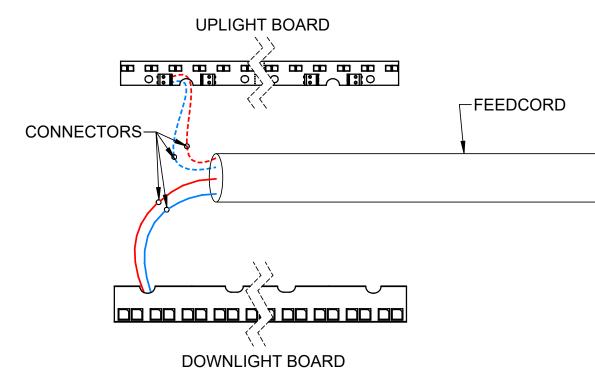



DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100

DRAWING: 93158030

REV / DATE: 6 / 3/4/2022