

## **70L DRIVER REPLACEMENT**

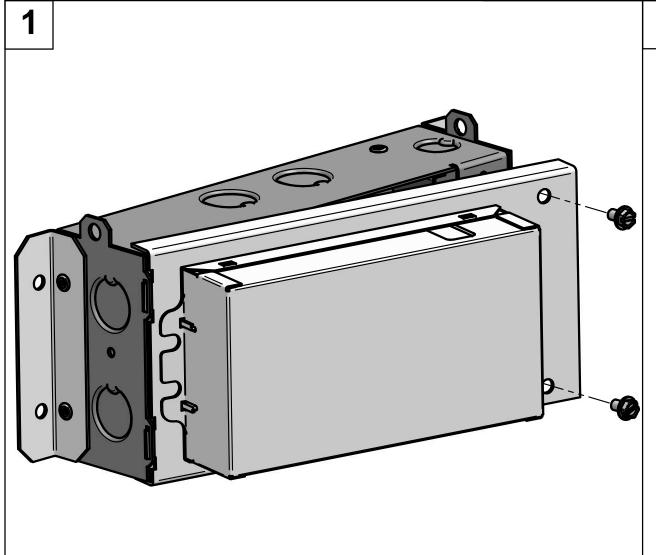


REMOVE COVER FROM ENCLOSURE

2

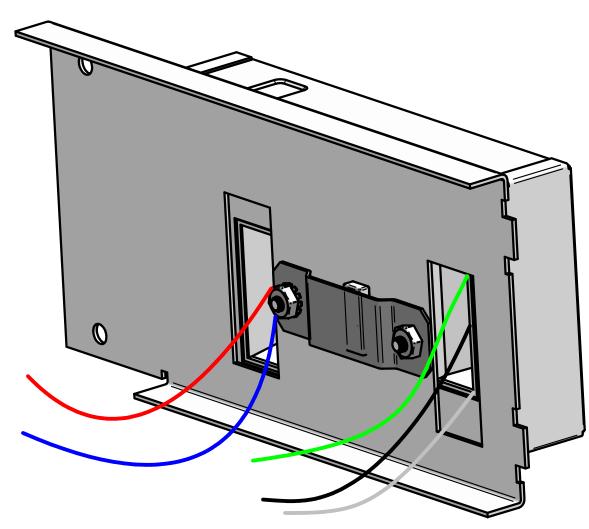



DISCONNECT DEFECTIVE DRIVER FROM WIRING. MAKE NOTE OF HOW THE DRIVER IS WIRED SO THE REPLACEMENT DRIVER IS WIRED CORRECTLY.

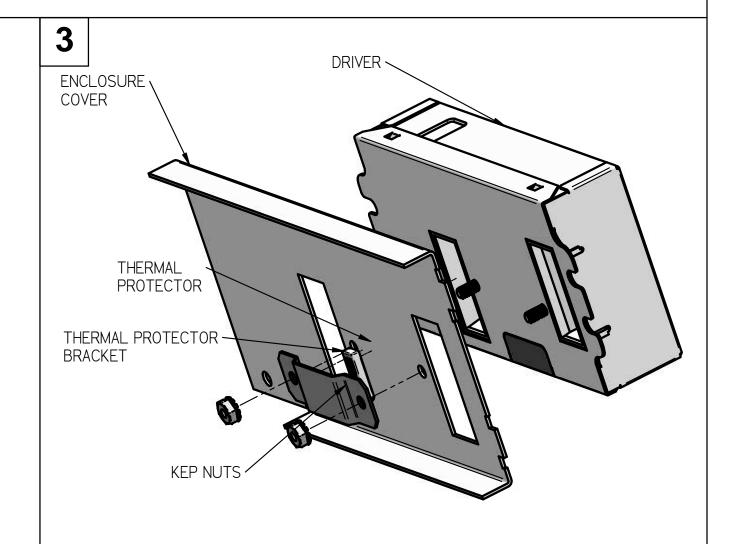


REMOVE THE TWO BOLTS FROM DRIVER AND REMOVE DRIVER FROM ENCLOSURE. FOLLOW STEPS IN REVERSE ORDER TO REINSTALL REPLACEMENT DRIVER. ENSURE THERMAL PROTECTOR IS SECURED BEHIND BRACKET.


## 75L DRIVER REPLACEMENT

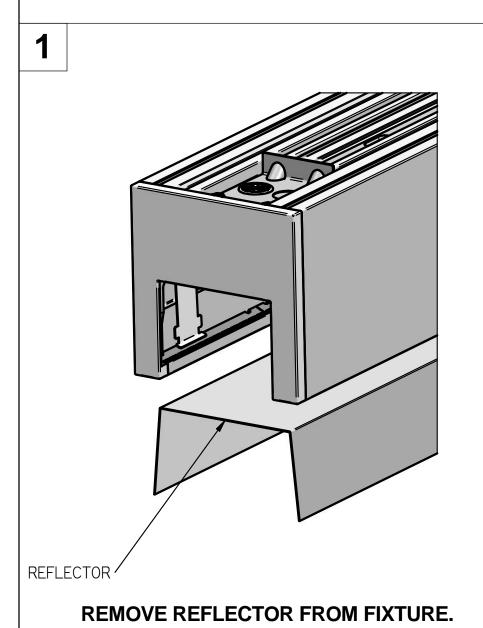

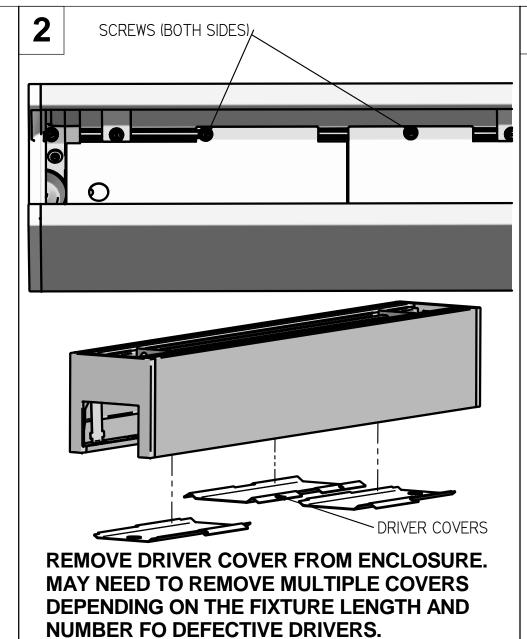

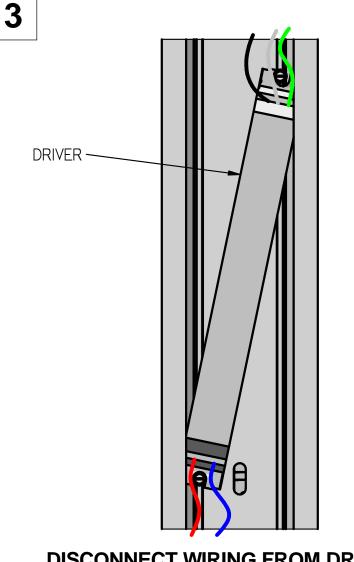

DISCONNECT WIRING FROM DRIVERS. MAKE NOTE OF HOW THE DRIVER IS WIRED SO THAT THE REPLACEMENT IS WIRED CORRECTLY.

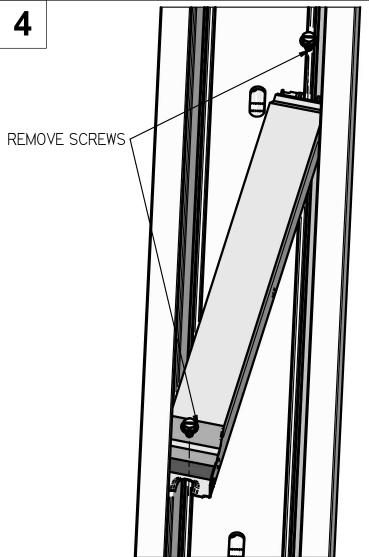

REMOVE SCREWS THAT SECURE DRIVER TO FIXTURE. FOLLOW STEPS IN REVERSE ORDER TO INSTALL REPLACEMENT DRIVER.





DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.


**DRAWING: 93159288** 

**REV / DATE: 2 / 3/10/2022** 


## LED BOARD REPLACEMENT

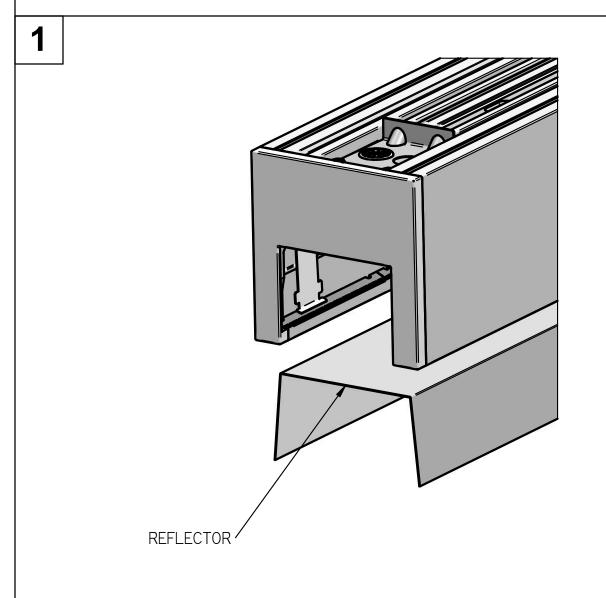

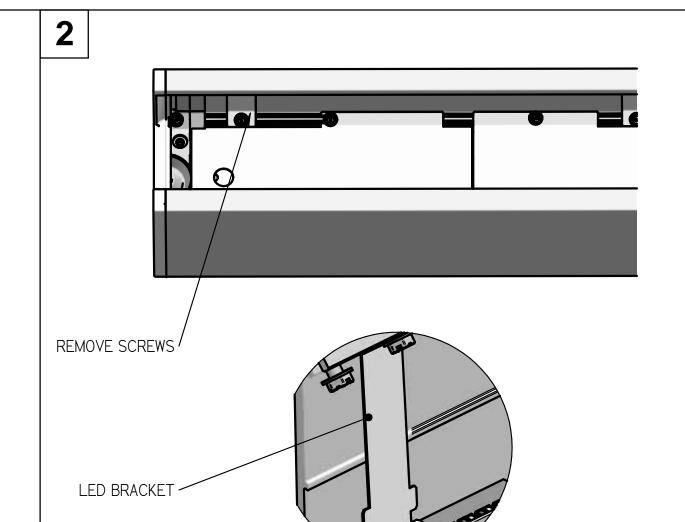


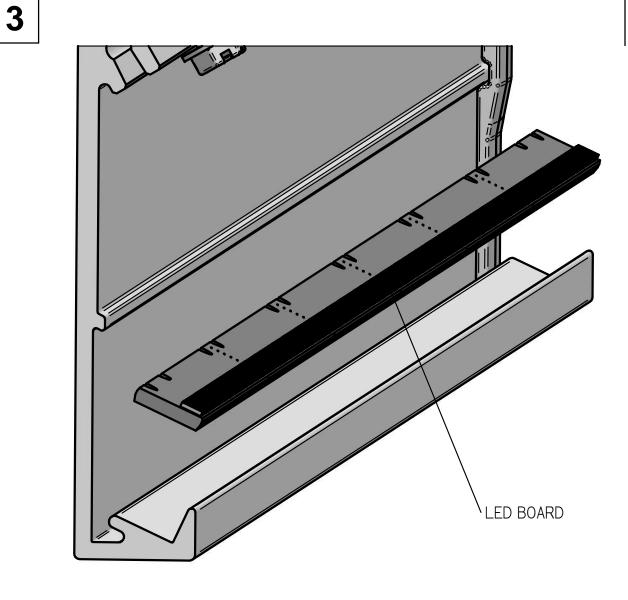

REMOVE REFLECTOR FROM FIXTURE.

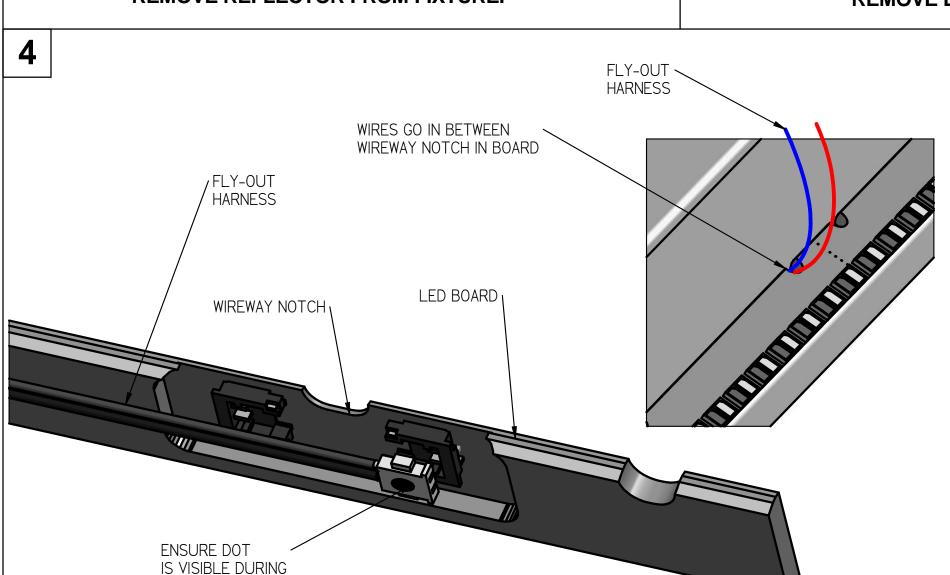

DISCONNECT LED BOARD(S) WIRING. FOLLOW STEPS IN REVERSE ORDER TO INSTALL REPLACEMENT BOARDS. ENSURE LED CONNECTORS ARE PLACED IN THE WIREWAY ON THE BOARDS TO AVOID PINCHED WIRES.

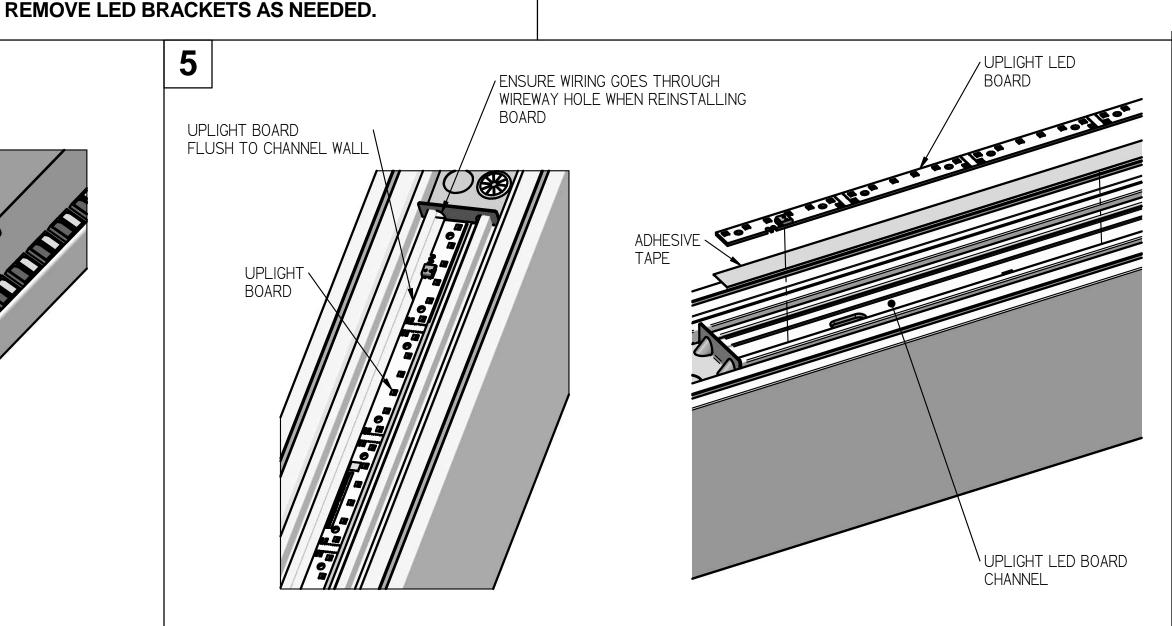

FOR UPLIGHT BOARDS, REMOVE DEFECTIVE BOARD(S) FROM FIXTURE AND DISCONNECT. REMOVE OLD ADHESIVE FROM FIXTURE AND REPLACE WITH NEW ADHESIVE. PLACE NEW BOARD FLUSH TO CHANNEL ON FIXTURE. WIRE ACCORDINGLY.



REINSTALLATION

DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.

**DRAWING: 93159288** 

**REV / DATE: 1 / 3/10/2022**